




№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	SJ-042	SJ Handrail kit		27	SJ-109	SJ Limit Frame	
2	SB-001	Lock nut		28	SB-015	Hexagonal Screw	
3	SJ-110	SJ Handle		29	SJ-028	SJ Handle Washer	
4	SJ-047	SJ Rubber Cap		30	SB-016	Plain cushion	
5	SB-002	Hexagonal Screw		31	SB-017	Hexagonal Screw	
7	SB-118	Plain cushion		32	SJ-026	SJ head shaft sleeve	
8	SJ-032B	SJ Iron Stick		33	SJ-003	SJ Gear	
9	SB-004	Nut		34	SB-018	Semicircular key	
10	SJ-032	Adjusting Stick 1		35	SB-019	Pin	
11	SB-123	Snap Spring		36	SJ-017	SJ Drive Bearing	
12	SB-165	Oil Seal		37	SJ-066	SJ Spring Pin	
13	SB-006	Lock nut		38	SB-020	Plain cushion	
14	SJ-033	SJ Iron Stick 2		39	SB-021	Tyre	
15	SB-007	Hexagonal nut		40	SJ-134	Gasoline Engine	
16	SJ-044B	SJ Crank		41	SB-022	Hexagonal Screw	
17	SJ-044C	SJ Rubber Circle		42	SB-023	Plain cushion	
18	SJ-068A	SJ control arm		43	SJ-031	SJ Pulley Cover	
19	SB-008	M6 Hex nut		44	SB-024	Lock nut	
20	SB-009	Hexagonal Screw		45	SB-025	Plain cushion	
21	SB-010	Lock nut		46	SJ-052	Hexagonal Screw	
22	SB-011	Hexagonal Screw		47	SJ-016B	SJ wire pulley	
23	SJ-068B	SJ joystick plate		48	SJ-016A	SJ pulley sub panel 1	
24	SB-012	Hexagonal Screw		49	SB-026	Plain cushion	
25	SB-013	Lock nut		50	SB-027	Hexagonal Screw	
26	SB-014	Hexagonal Screw		51	SB-028	Lock nut	

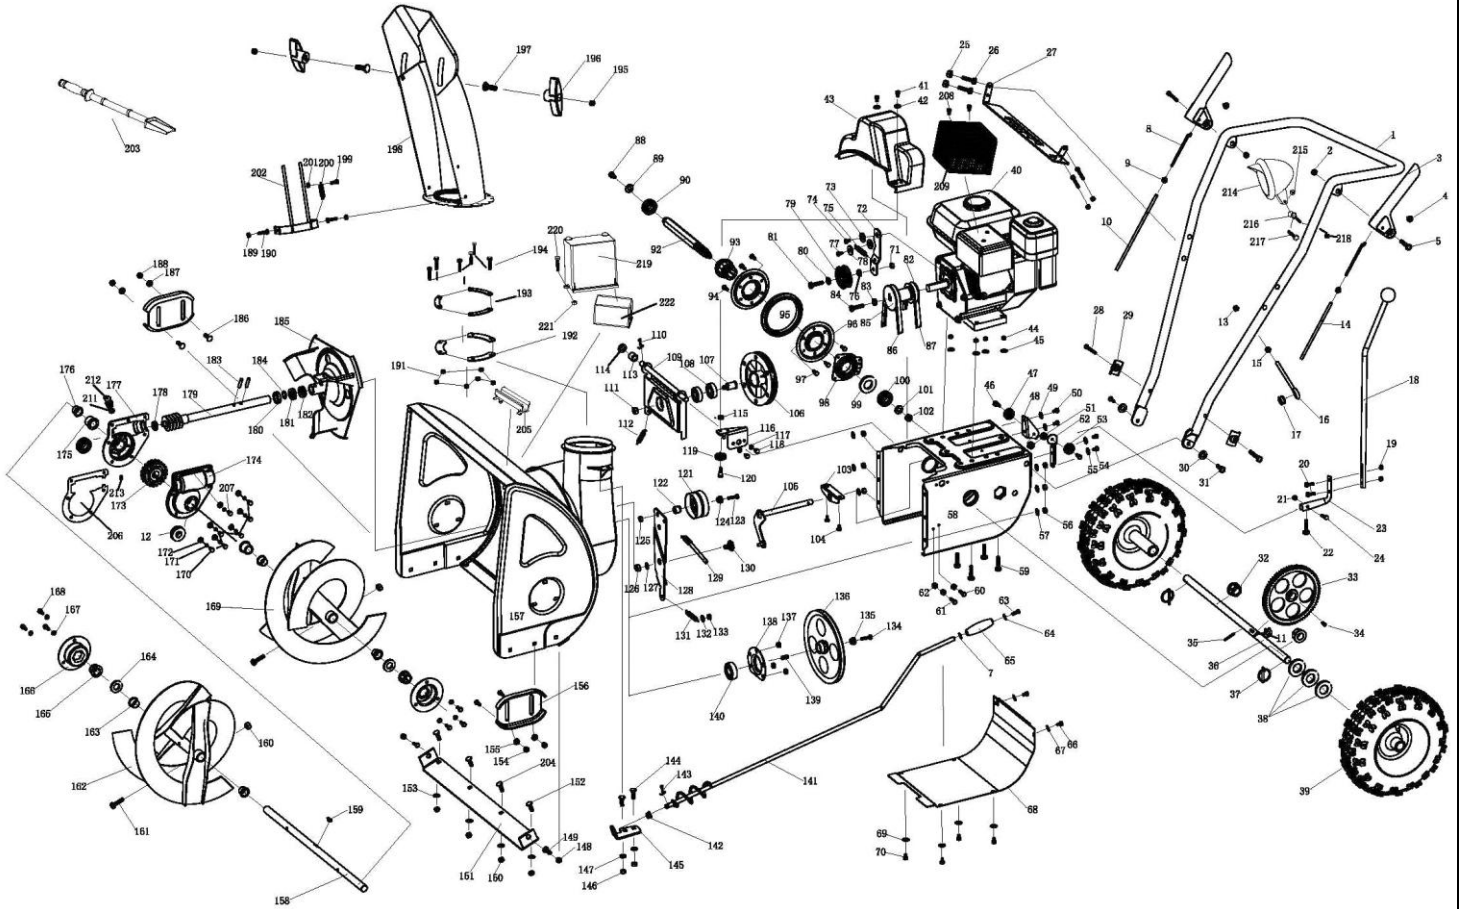

№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
52	SJ-014	SJ pulley sub panel 3		77	SB-045	Hexagonal Screw	
53	SJ-016B	SJ wire pulley		78	SB-046	Plain cushion	
54	SB-029	Hexagonal Screw		79	SX-11-170	Small tension pulley (+ Bearing)	
55	SB-030	Plain cushion		80	SJ-008C	SJ Pallet	
56	SB-031	Lock nut		81	SB-047	Hexagonal Screw	
57	SB-032	Plain cushion		82	SJ-049	Man Synchronization Wheel	
58	SJ-103	SJ Gearbox Cover		83	SB-048	Plain cushion	
59	SB-033	Hexagonal Screw		84	SB-049	Hexagonal Screw	
60	SB-034	Hexagonal Screw		85	SJ-049B	SJ Main pulley	
61	SB-035	Hexagonal Screw		86	SB-050	V-belt	
62	SB-036	Lock nut		87	SB-051	Synchronization Belt	
63	SB-037	Cross recessed round head screw		88	SB-052	Hexagonal Screw	
64	SB-038	Plain cushion		89	SB-053	Plain cushion	
65	SJ-018	SJ Handle Sleeve		90	SB-054	Deep groove bearing with snap	
66	SB-039	Hexagonal Screw		92	SJ-005	SJ Hexagon Gear-shaft	
67	SB-040	Plain cushion		93	SJ-013C	SJ Change pulley	
68	SJ-102	SJ Gearbox Cover		94	SB-055	Hexagonal Screw	
69	SB-041	Plain cushion		95	SJ-013D	SJ Change pulley Circle	
70	SB-042	Hexagonal Screw		96	SJ-013A	SJ Change pulley washer	
71	SB-043	Lock nut		97	SB-056	Hexagonal Screw	
72	SJ-045	SJ Tension Plate		98	SJ-013B	SJ Change pulley cover	
73	SJ-046-1	Tension convex washer		99	SB-057	Snap Spring	
74	SB-044	Hexagonal Screw		100	SB-058	Deep slot bearing	
75	SJ-035-1	SJ Spring 3		101	SB-059	Plain cushion	
76	SX-11-170B	SJ Washer 2		102	SB-060	nut	

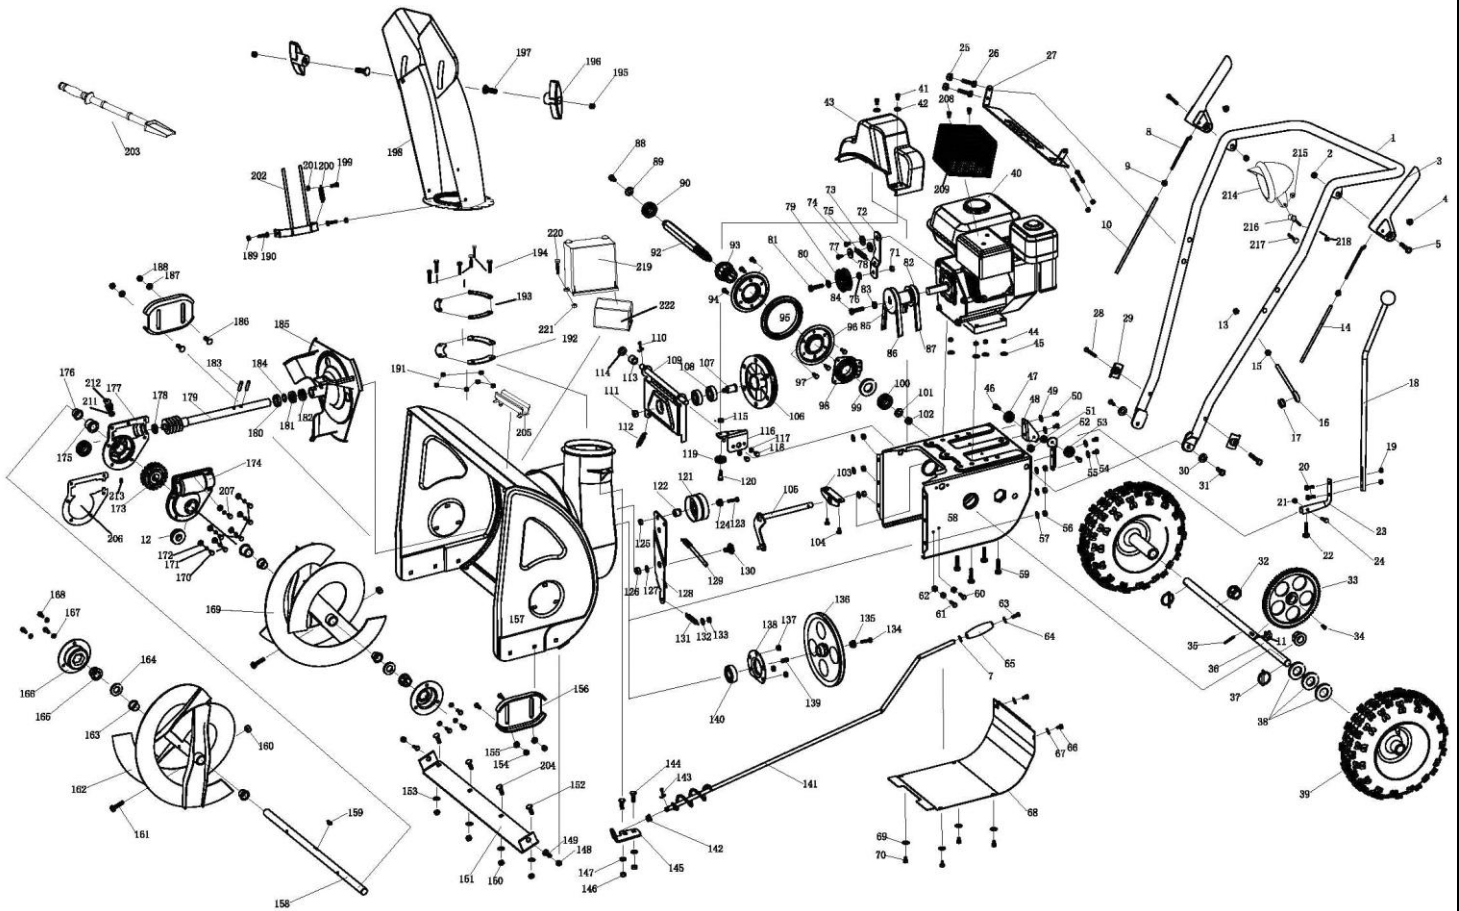

№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
103	SJ-002	SJ Orthogonal Iron		128	SJ-023	SJ Dead plate	
104	SB-061	Hexagonal Screw		129	SJ-032A	Spring 1	
105	SJ-040	SJ Gearlever		130	SJ-050	SJ Hexangular Screw 1	
106	SJ-010A	Drive Synchronization Wheel		131	SJ-037	Spring 5	
107	SJ-010B	SJ Driving bearing		132	SB-073	Plain cushion	
108	SB-062	Deep slot bearing		133	SB-074	Lock nut	
109	SJ-007	SJ Pulley bracket		134	SB-075	Hexagonal Screw	
110	SB-063	Pin		135	SB-076	Plain cushion	
111	SB-064	Lock nut		136	SJ-039	SJ Pulley	
112	SJ-069	Spring 6		137	SB-077	Lock nut	
113	SJ-107	SJ Separate Sleeve		138	SJ-004	SJ Rockered Cover	
114	SB-065	Plain cushion		139	SB-078	Square Key	
115	SB-066	Flange screw		140	SB-079	Bearing	
116	SJ-015	SJ Pulley sub panel 2		141	SJ-044A	SJ Handle	
117	SB-067	Plain cushion		142	SJ-011A	SJ sub panel plastic circle	
118	SB-068	Hexagonal Screw		143	SB-080	Pin	
119	SJ-016B	SJ wire pulley		144	SB-081	Step bolt	
120	SJ-052	Hexagonal Screw		145	SJ-011	SJ Sub panel	
121	SJ-008	SJ Tension pulley 2(+Bearing)		146	SB-082	Lock nut	
122	SJ-008B	SJ Washer		147	SB-083	Plain cushion	
123	SB-069	Hexagonal Screw		148	SB-084	Lock nut	
124	SJ-008C	SJ Pallet		149	SB-085	Step bolt	
125	SB-070	Lock nut		150	SB-086	Lock nut	
126	SB-071	Lock nut		151	SJ-006	SJ Shave Plate	
127	SB-072	Plain cushion		152	SB-087	Step bolt	

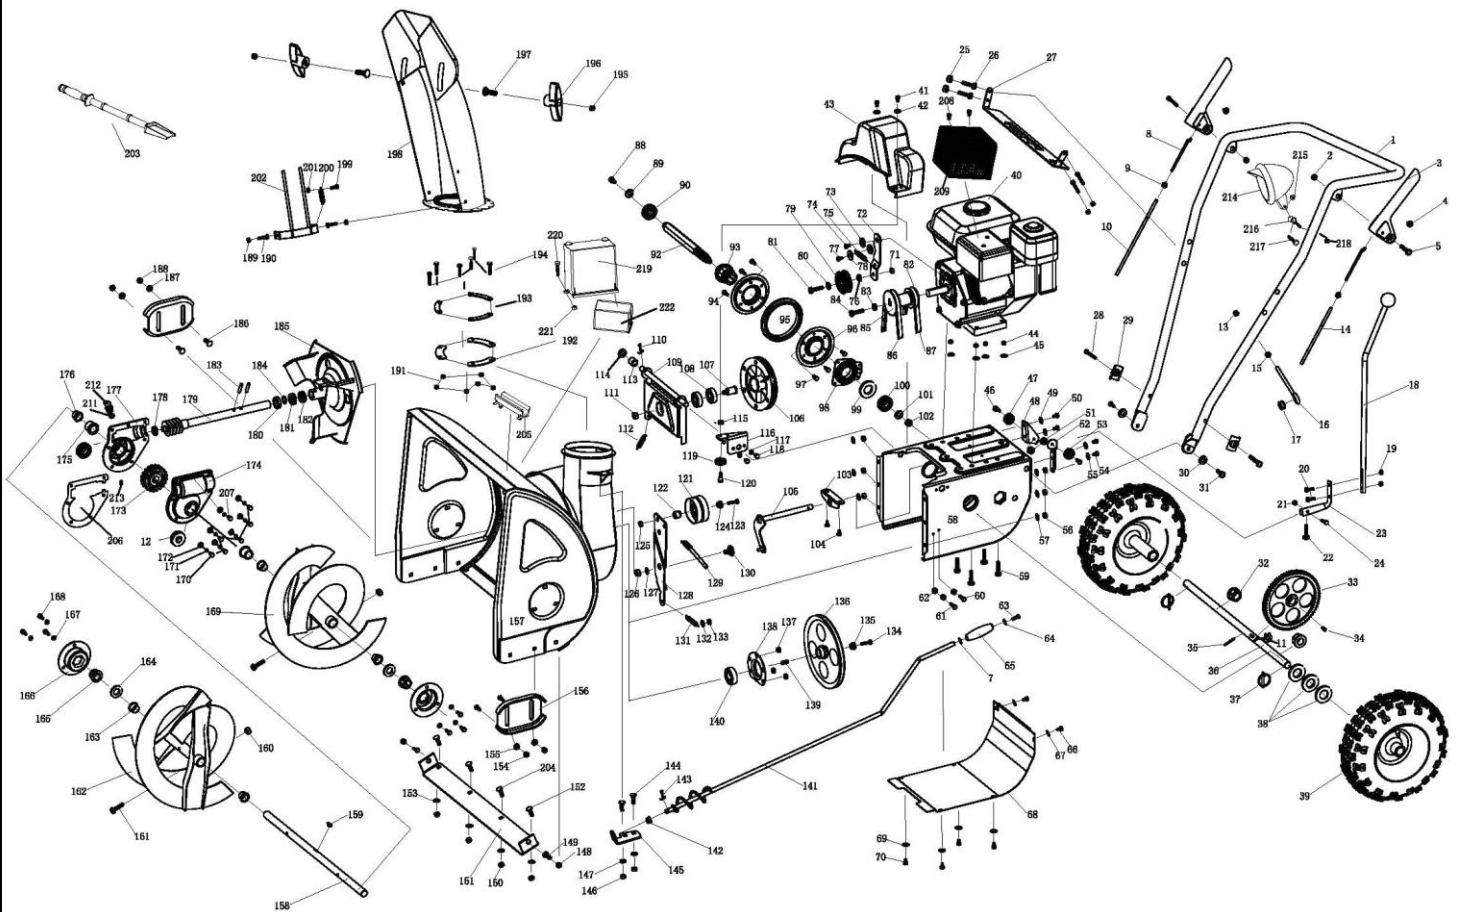

№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
153	SB-088	Plain cushion		178	SB-099	Deep slot bearing	
154	SB-089	Lock nut		179	SJ-030	SJ Drive Worm shaft	
155	SB-090	Plain cushion		180	SB-100	Deep slot bearing	
156	SJ-111	SJ Sliding Stick		181	SB-101	One direction thrust bearing	
157	SJ-104	SJ Steel Cover		182	SB-102	Oil Seal	
158	SJ-022	SJ Output Shaft		183	SB-103	Pin	
159	SB-091	Semicircular key		184	SJ-057	Washer	
160	SB-092	Lock nut		185	SJ-001	SJ Fan	
161	SJ-070	Not-Standard Screw		186	SB-104	Step bolt	
162	SJ-067A	SJ Left Auger		187	SB-105	Plain cushion	
163	SJ-019	SJ Drive Shaft Sheath		188	SB-106	Lock nut	
164	SB-093	Plain cushion		189	SB-107	Lock nut	
165	SJ-020	SJ Shaft Sheath		190	SB-108	Hexagonal Screw	
166	SJ-024	SJ Bearing Cover		191	SB-109	Lock nut	
167	SB-094	Plain cushion		192	SJ-021	Chute Bead	
168	SB-095	Hexagonal Screw		193	SJ-021C	Chute Gasket	
169	SJ-067	SJ Right Auger		194	SB-120	Hexagonal Screw	
170	SB-096	Hexangular Screw		195	SB-111	Lock nut	
171	SB-097	Spring Washer		196	SJ-138	Locking Handle	
172	SB-098	Plain cushion		197	SB-112	Step bolt	
173	SJ-038	SJ Worm Wheel		198	SJ-140	Chute	
174	SJ-101	SJ Upper Pedestal		199	SB-113	Hexagonal Screw	
175	SJ-108	SJ Shaft Sheath		200	SJ-036	Spring 4	
176	SJ-019	SJ Drive Shaft Sheath		201	SB-114	Flange screw	
177	SJ-101A	SJ Pedestal		202	SJ-012	SJ Discharge Chute Accessories	

